

SKYLINE COFFEE TABLE

SK-0410

BREE**ZESTA** tm

Recycled Poly Furniture

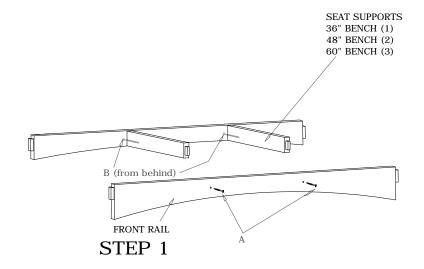

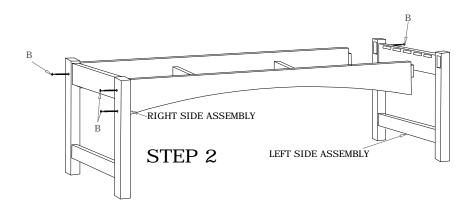

Place Seat Supports in place and using screws (A), attach the Rails as shown in the drawing

A-1.5"colored


B-2.5"colored

C-2"uncolored

LIST OF PARTS
Rails (2)
End Assembies (2)
Seat Slats (5)
Seat Supports (see chart)
Hardware (see chart)
Insert Bit Tool (1)

Bench Size	36"	48"	60"
Seat Supports	1	2	3
Screw "A"	8	10	12
Screw "B"	8	8	8
Screw "C"	5	10	15
$A \nearrow F \nearrow O$			

Attached Side Assemblies to Rail Assembly using screws (B) as shown.

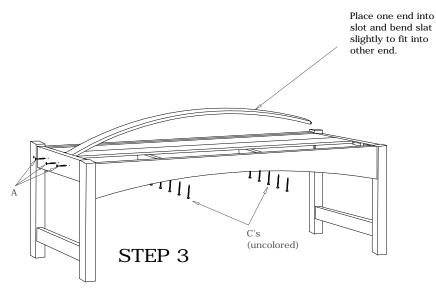

Fit slats into table as shown. From the bottom side use uncolored screws (C) to secure slats. Use screws (A) to attach Side Assemblies to Slats.