
LuxCraft
FINE OUTDOOR FURNITURE

Tools Required


5/32 Hex Key (Included)



#2 Square Drive Bit
(Not Included)




Cordless Drill
(Not Included)

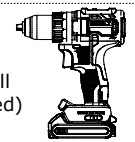


Hardware
6 - 2 1/2" Stainless Wafer Bolts
1 - 2" Stainless Steel Screw
4 - 1 1/2" Stainless Steel Screws
1 - 5/32" Hex Key


Seat Assembly x1

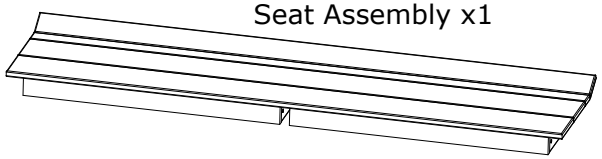

Outside Legs x2

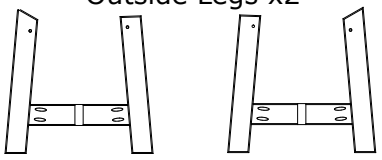

Center Leg x1

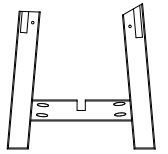


Cross Pc. x1







1. Attach Leg Assemblies to Seat Assembly using 2 - 2 1/2" Wafer Bolts per Leg Assembly in predrilled holes, Be sure to match all numbers.

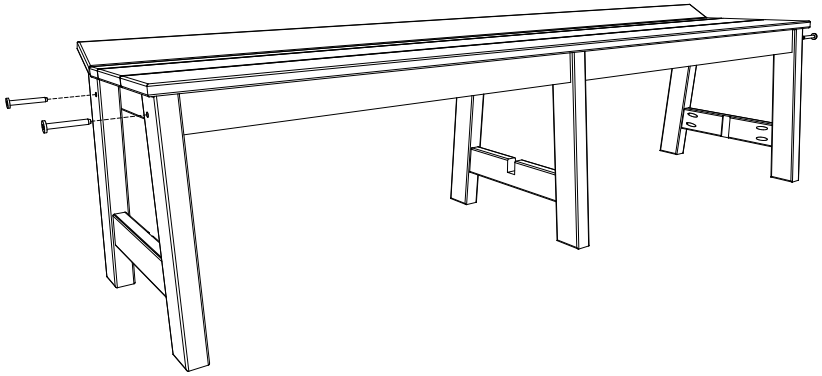

2. Attach Cross Pc.to Leg Assemblies using 2 1 1/2" Screws per side and 1 2" Screw in center, Be sure to match all numbers.

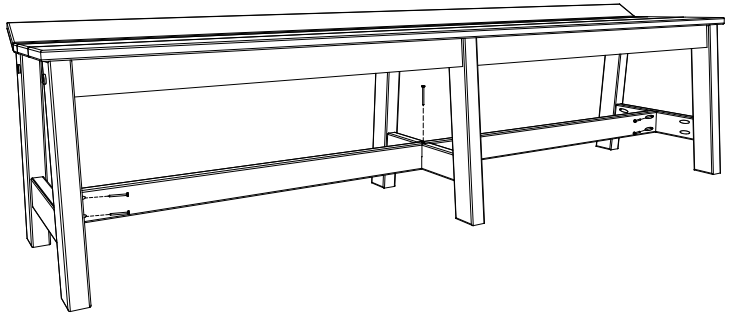

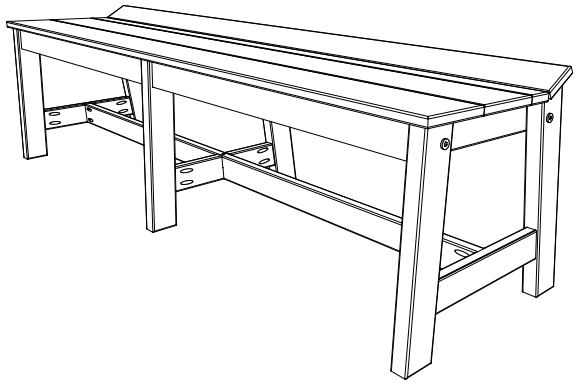

LuxCraft™
FINE OUTDOOR FURNITURE

72" Café Dining Bench Assembly Instructions	
11/25/ 2024	R.M.