

LuxCraft
FINE OUTDOOR FURNITURE

Hardware
4 - 2-1/2" Stainless Wafer Bolt
4 - 1-1/2" Stainless Steel Screw
1 - 5/32" Key


Seat Assembly x1

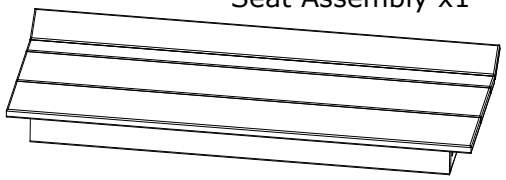

Leg Asembly x2

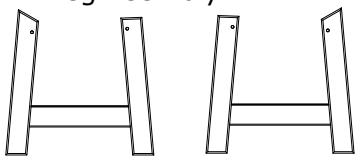

Cross Pc. X1







Tools Required


5/32 Hex Key (Included)




#2 Square Drive Bit
(Not Included)




Cordless Drill
(Not Included)

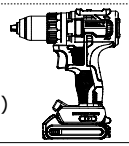


1. Attach Leg Assemblies to Seat Assembly using 2 2-1/2" Wafer Bolts per side in predrilled Holes.
Be Sure to match all numbers.

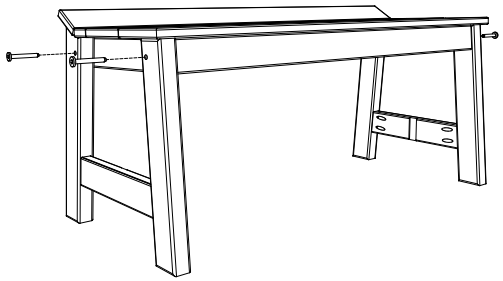

2. Attach Cross Pc. to Leg Assemblies using 2 1-1/2" Screws per side in predrilled holes.
Be sure to match all numbers.

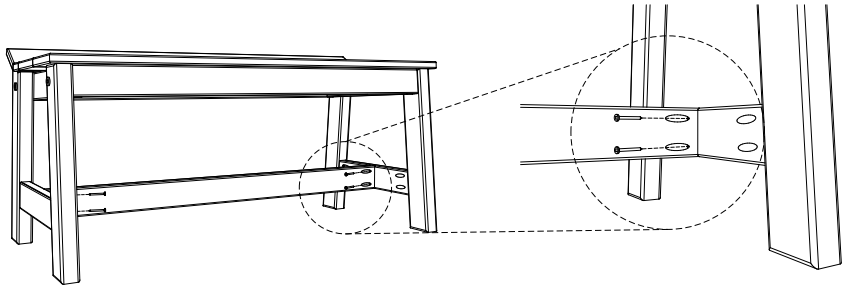

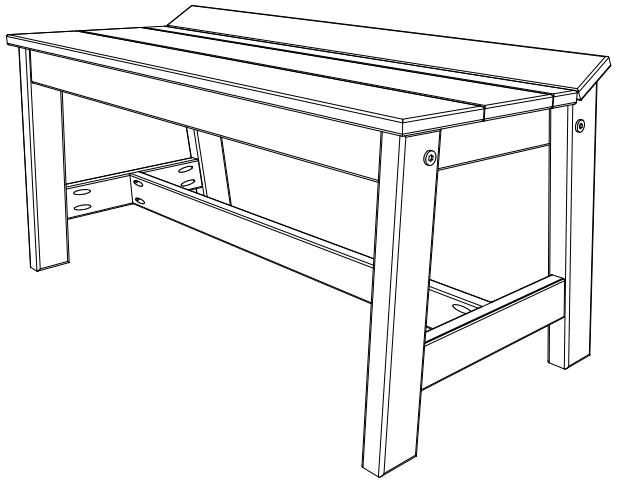

LuxCraft™
FINE OUTDOOR FURNITURE

| 41" Café Dining Bench Assembly Instructions | |
|---|---|
| 11/25/ 2024 | R.M. |